

Maintaining your Dec-Tec Deck



SUPPLIES: Mild detergent, like dish soap or OxiClean™
Light bristle broom or brush
Garden hose or pressure washer

Cleaning your Dec-Tec will prevent build-up of dirt and grime which in turn will help prevent mold and mildew, as well as potentially slippery conditions.

EASY 1, 2, 3 CLEANING GUIDE



Periodically rinse deck off using a garden hose or pressure washer, set at its lowest setting, 2 ft. from the deck surface with only water.



With a mild detergent, like dish soap, or an OxiClean™ type product, use a light bristle broom or brush and work the soap solution across the entire deck and rinse off with water.



Repeat the process for stubborn areas and **never** use solvents!

THE BEST WAY TO ENJOY YOUR OUTDOOR FLOORING:

DO

- ✓ Wipe up spills as soon as possible.
- ✓ Periodically move items such as flower pots and patio furniture to prevent build up of dirt.
- ✓ Use a plastic shovel to remove snow.
- ✓ Use mats at doorways and landings whenever possible, and be careful with rolling castors.
- ✓ **Enjoy your Dec-Tec!**

DON'T

- ✗ Extinguish cigarettes on Dec-Tec membrane.
- ✗ Drag heavy and/or sharp objects across the deck.
- ✗ Just use *any* de-icing product. De-icing salt products can be used on Dec-Tec, however all products available in the market have not been tested and some *may* cause premature fading.
- ✗ Let BBQ grease drip onto the deck.
- ✗ Let flower pots drip onto the deck where soil additives can leak out and cause membrane discoloration.